

# DECINA

DISCOVER INDULGENCE

## FREESTANDING BATH INSTALLATION & OWNER GUIDE

Manufactured from premium sanitary grade acrylic, Decina's freestanding baths are easy to install, with adjustable self-supporting feet & can be freely located anywhere in your bathroom. This manual is designed to provide the correct installation steps & care advice, for a long lasting installation.



**THIS PRODUCT MUST BE INSTALLED BY A QUALIFIED TRADESMAN**

### **PRE-INSTALLATION CHECKS**

- ❗ Unpack & check the item is correct & no damage has occurred during transit.
- ❗ If there are any visible defects **DO NOT PROCEED WITH THE INSTALLATION & please contact the place of purchase immediately. ANY CLAIMS FOR DAMAGE WILL NOT BE ACCEPTED AFTER INSTALLATION.**
- ❗ Protect your bath before & during installation, scratches &/or cracks &/or surface damage sustained during or after the installation are not covered by warranty.
- ❗ Installation must be in accordance with building regulations & local authority requirements.

### **CARING FOR YOUR BATH**

DECINA USES THE HIGHEST SANITARY GRADE ACRYLIC, HOWEVER NAKED FLAMES, CIGARETTES OR STRONG CHEMICALS SHOULD BE AVOID & REMOVED IMMEDIATELY TO PRESERVE THE HIGH GLOSS ACRYLIC SURFACE:

- ❗ When filling the bath start with cold water to allow the bath to gradually adapt to the temperature.
- ❗ After using your bath clean with a soft cloth & warm soapy water to clean any oils or soap, to prevent tide marks & preserve the polished surface.
- ❗ Clean using warm soapy water & only mild liquid detergents. Do not use powders, pastes, creams, chemicals, window cleaning sprays or abrasive cleaners.
- ❗ Cream cleaners may only BE USED to remove stubborn marks.
- ❗ Scratches can be removed with a fine polish like Brasso.


## INSTALLATION STEPS

1. Remove your freestanding bath from the carton & place it in the correct position for installation. Check for damage & ensure your bath does not come in contact with any rough surfaces which may scratch your bath. Place your freestanding bath on cardboard or carpet during installation.

2. Turn the self-leveling feet so the bath base is level & 3-5mm above the finished floor.

*A) Ensure there is a gap of 3-5mm between the bath shell & the floor. Installing the bath shell directly onto the bath floor will place pressure on the outside wall of the bath & can crack the bath.*

*B) Ensure the bath is level so all the water can drain to the waste outlet.*

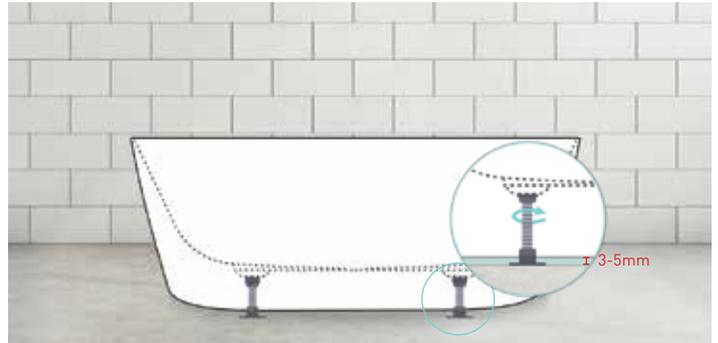


3. Carefully tilt the bath on its side & connect it to the drain outlet. We recommend using a *Decina Flexible Connector*. Ensure the Flexible Connector is cut to the correct length for easier installation & to prevent drainage issues.

4. Before finishing, water test for leaks & correct drainage.

*A) Fill the freestanding bath with water and check the water flows easily to the waste outlet.*

**NOTE** *a small amount of water may pool due to surface tension.*

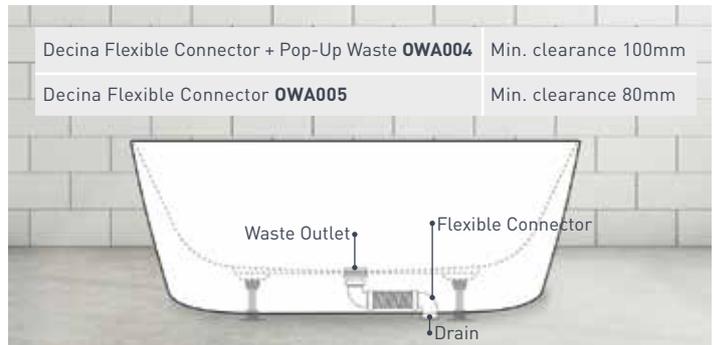

5. Apply a thick bead of silicon around the bath base & the finished floor & allow it to set for 24 hours.



## WARRANTY TERMS & CONDITIONS

All Decina products are manufactured to the highest standards and guaranteed to be free of defects, subject to the conditions outlined below. In addition to the statutory rights given under Australian Consumer Law, Decina offers the following extended warranty periods from the date of purchase or handover:

PRODUCT	WARRANTY	TERMS
FREESTANDING BATH - Acrylic Shell / Steel Frame	10 Years / 1 Year	Replacement Products / Parts & Labour

For the full terms & conditions of the warranty, please visit the Decina website [decina.com.au/warranty](http://decina.com.au/warranty)

To make a warranty claim, please visit the Decina website [decina.com.au/warranty-claim/](http://decina.com.au/warranty-claim/) or email [services@decina.com.au](mailto:services@decina.com.au)

**PLEASE LEAVE THIS MANUAL WITH THE END USER.** Copyright Feb 2019. Decina Bathroomware Pty Ltd. ABN 39845 084 033.